


Specification Check

- Before installation, please ensure that your bike frame and crankset meet the following specifications.

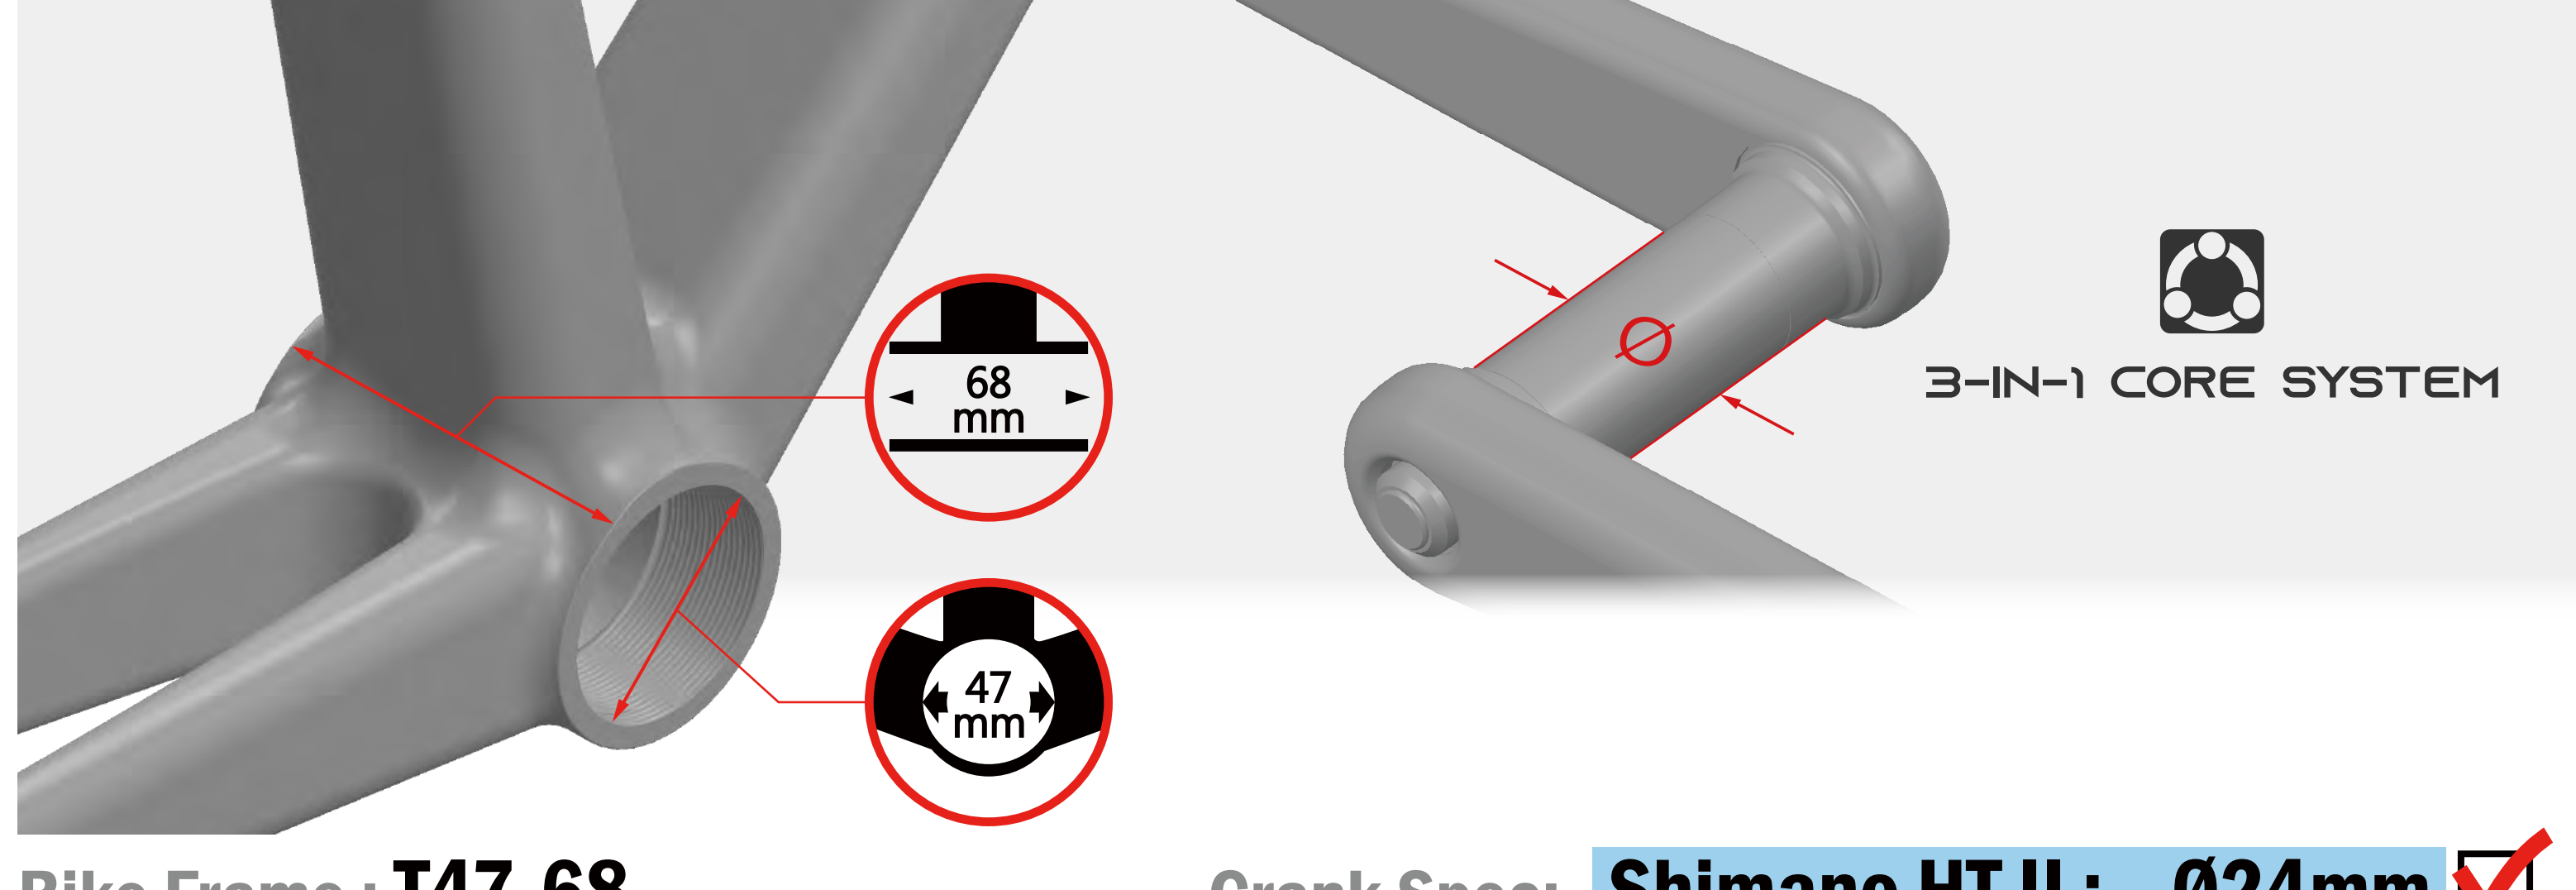

Bike Frame : T47-68

Thread Type
Inner Diameter : 47mm
Width : 68mm

Crank Spec:

Shimano HT II : Ø24mm

SRAM DUB : Ø28.99mm

ROTOR 3D+ : Ø30mm

BB T47-68 UNI-CORE Anatomy

- Before installation, please ensure that the purchased BB meets the following specifications and includes the following contents.



General Safety

- To install TRIPEAK Bottom Bracket, we strongly recommend that you have a trained bicycle mechanic at your local bike shop.
- Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
- Make sure the crankset is firmly attached to the bottom bracket, Improperly attached cranks can become detached from the BB set.
- When cleaning the bottom bracket set, only use mild soap and water. Never use high-pressure water jet, It will cause BB cup internal water ingress and influencing the bearing rolling lifetime.
- If you have any questions or concerns about this product, Please feel free to contact us. E-mail: info@tripeakbearing.com




Required Tools



Bottom Bracket Installation

Ensure the internal cable routing of the frame will not interfere with the BB installation. Clean the threads of the frame, and apply a thin layer of grease on the threads and the BB contact surface to prevent seizing with the BB shell.

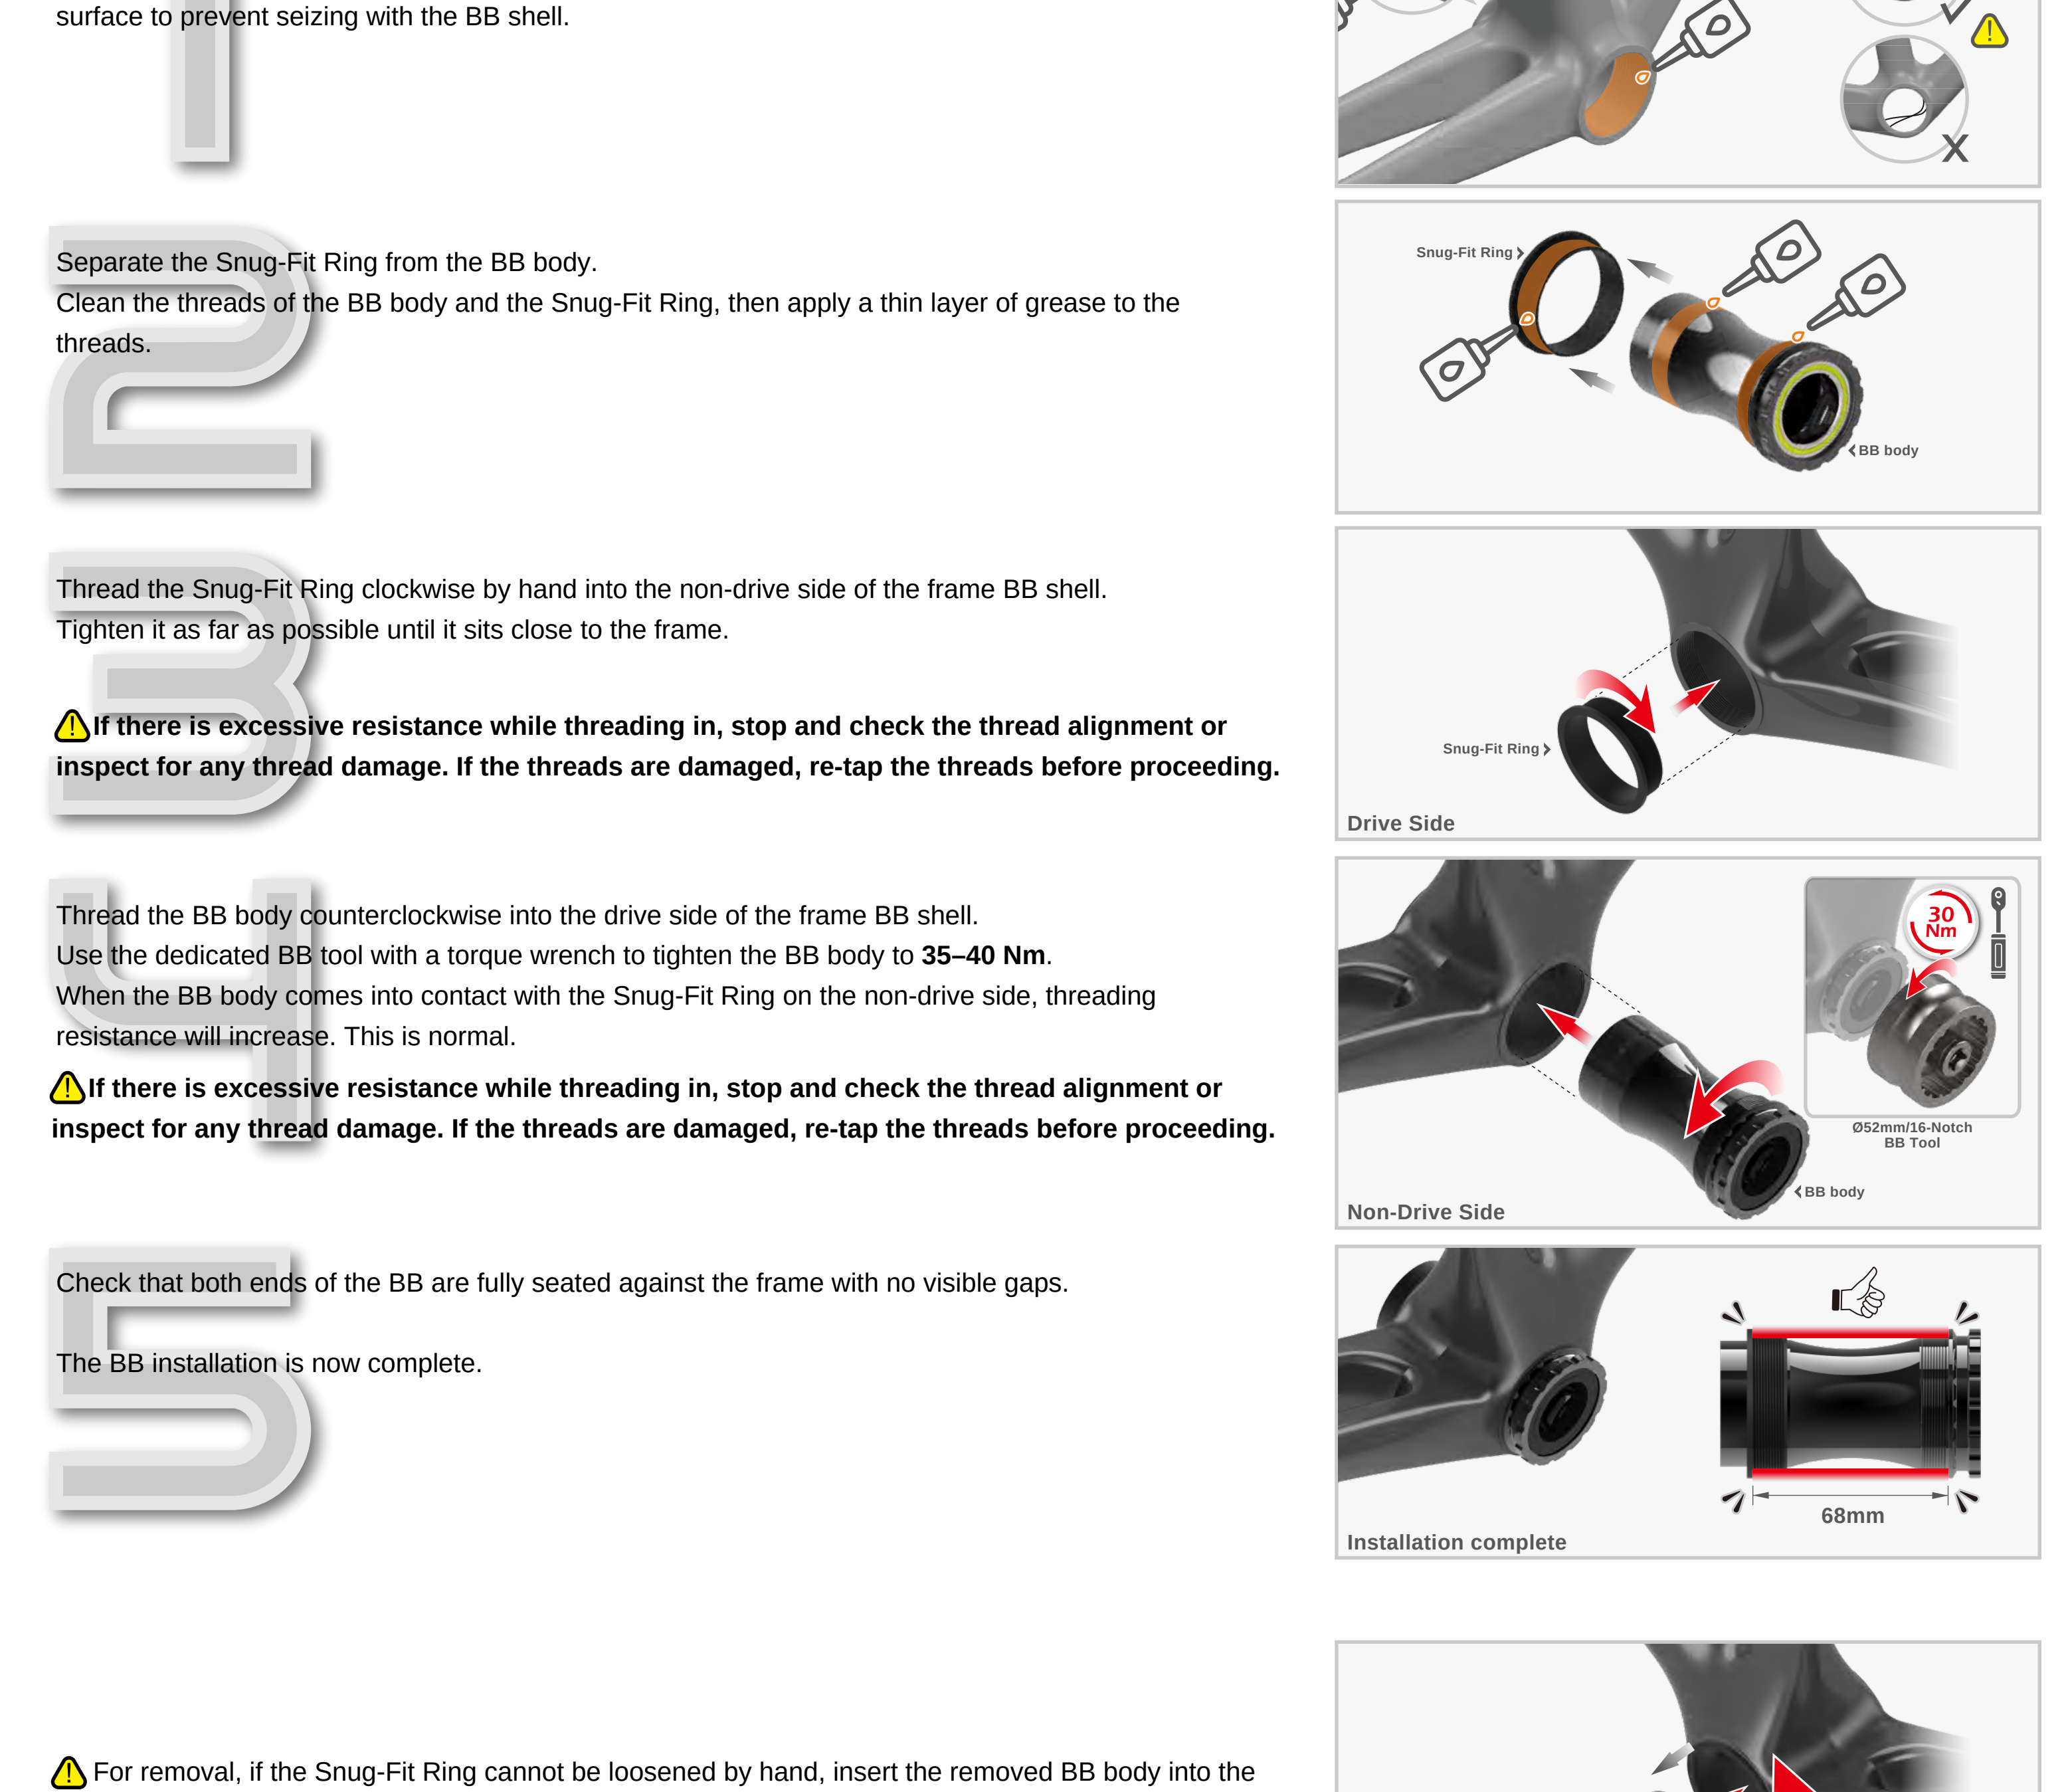

Installation of Crank's Adapter

3-IN-1 CORE SYSTEM



Bottom Bracket Maintenance



Reapply lubricant to Bottom Bracket

