


◆ Before installation, please ensure that your bike frame and crankset meet the following specifications.

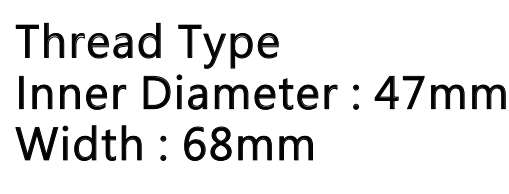


ROTOR 3D+ : Ø30mm ✓

◆ Before installation, please ensure that the purchased BB meets the following specifications and includes the following contents.


◆ To install TRiPEAK Bottom Bracket, we strongly recommend that you have a trained bicycle mechanic at your local bike shop.

- ◆ Do not alter this product in any way as it can cause unseen damage. Any modifications to this product will void the warranty.
- ◆ Make sure the crankset is firmly attached to the bottom bracket, Improperly attached cranks can become detached from the BB set.
- ◆ When assembling the bottom bracket set, only use mild soap and water. Never use high-pressure water jet, It will cause BB cup internal water ingress and influencing the bearing rolling lifetime.
- ◆ If you have any questions or concerns about this product, Please feel free to contact us. E-mail: info@tripeakbearing.com

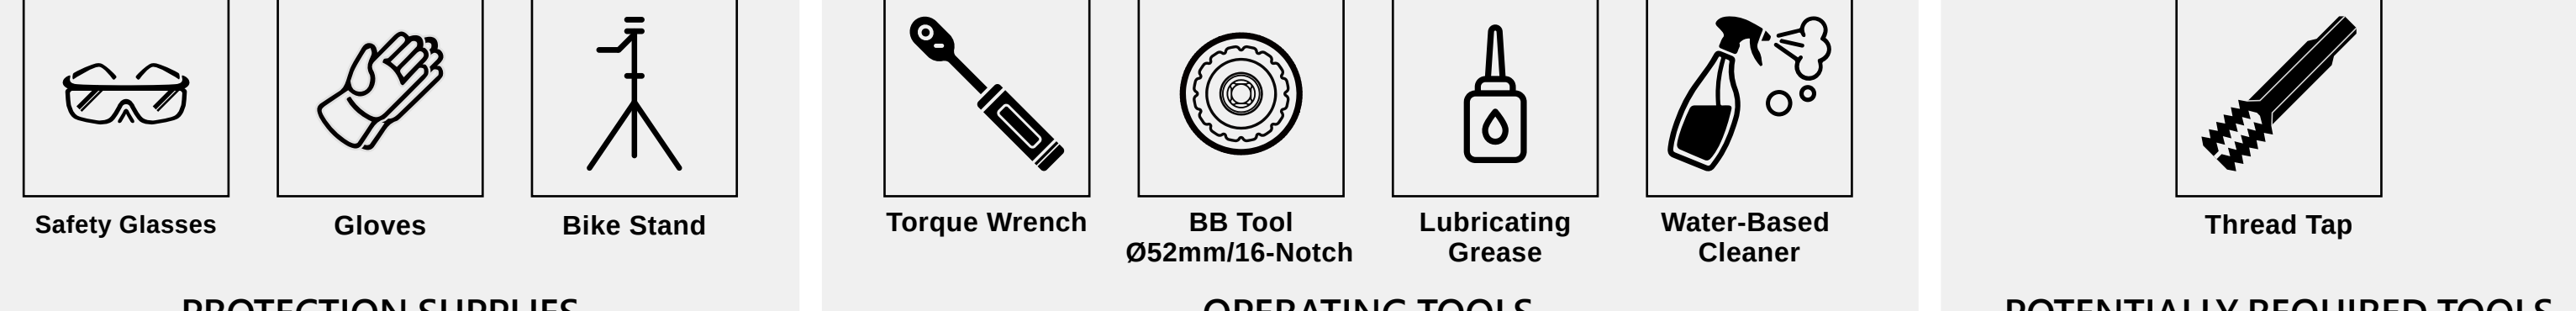


Clean the threads of the frame, and apply a thin layer of grease on the threads and the BB contact surface to prevent seizing with the BB shell.


Clean the threads of the frame, and apply a thin layer of grease on the threads and the BB contact surface to prevent seizing with the BB shell.

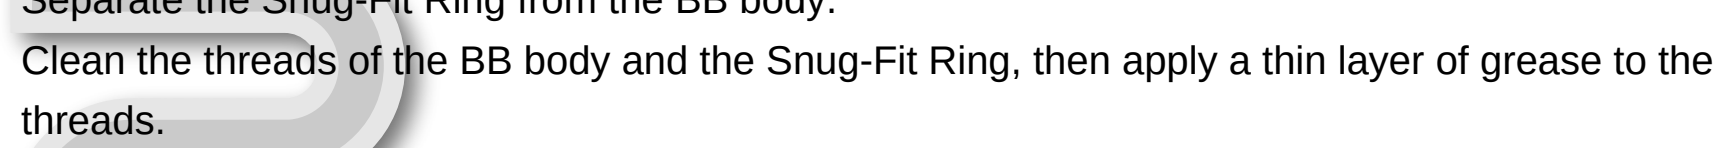

Introduction

 

E

 

When the BB body comes into contact with the Snug-Fit Ring on the non-drive side, the resistance will increase. This is normal.



 
 
Check that both ends of the BB are t

 For removal, if the Snug-Fit Ring cannot be loosened by hand, insert Snug-Fit Ring and turn it counterclockwise to remove the Snug-Fit Ring.



◆ For maintaining and servicing TRIPEAK bottom brackets, we strongly recommend hiring a trained bicycle mechanic at your local bike shop.

- ◆ **Regular maintenance is generally recommended after riding 5,000-10,000 km. If riding in harsh conditions (wet, dusty, extreme temperatures, etc.), it is advised to perform maintenance immediately after riding.**
- ◆ **Avoid repeated disassembly and reassembly of the BB Cup unless necessary, as maintenance should only focus on the BB bearings to prevent damage to the frame.**
- ◆ **Do not use high-pressure water jets to clean the BB to avoid water infiltration and bearing damage.**
- ◆ **Regularly check the torque value of the BB Cup, and do not ride with a loose BB Cup.**



dry completely.